


SPIRA-CEL[®] Data Sheet

- Sanitary Modules for Nanofiltration -

DS-NP-6338 Series

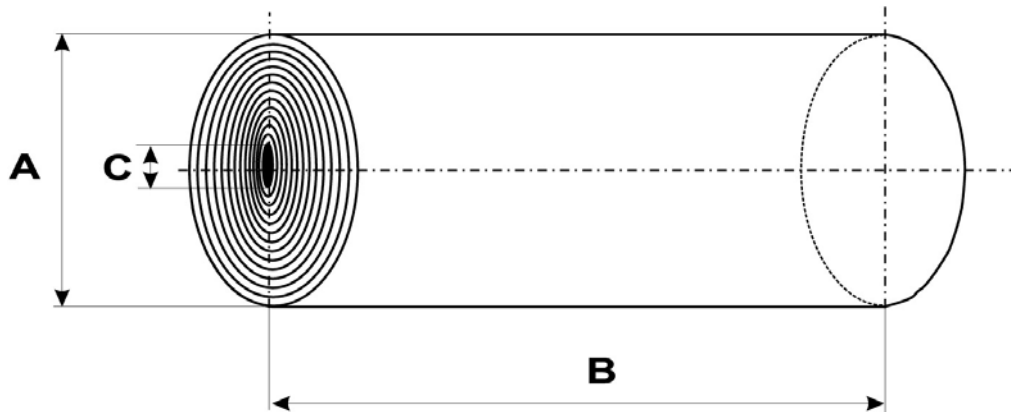

Module		A	B	C	Membrane		
		Ø Outside Module	Length Module	Ø Inside Permeate tube	NADIR [®] membranes	NP010	NP030
					Membrane material	PES	PES
Dimension	mm	162	965	28.9			
Tolerance	mm	+0 / -3	+1 / -2	± 0.1			

Module specs & data						
Spacer thickness, diamond type			mil / mm	30 / 0.8	44 / 1.1	80 / 2.0
Membrane area			m ²	20.5	17.1	11.5
Outer wrap						Spacer wrap

Recommended operating conditions						
Prefiltration			µm	≤ 50	≤ 75	≤ 150
Crossflow ⁽¹⁾			m ³ /h	16	18	25
Permeate pressure			bar	0	0	0
Pressure loss per module (Δp)			bar	1.0 - 1.3	1.0 - 1.3	1.0 - 1.3
Pressure loss per housing (Δp)			bar	Please contact MICRODYN-NADIR		

Allowable operating conditions						
Feed pressure, max.			bar	40	40	40
Retentate pressure, min.			bar	0.7	0.7	0.7
Permeate pressure, max.			bar	0.35	0.35	0.35
Transmembrane pressure, max.			bar	40	40	40
Pressure loss per module, max. (Δp _{max})			bar	Please contact MICRODYN-NADIR		
Processing temperature			°C	5 - 75	5 - 75	5 - 75
pH range during filtration				2 - 10	2 - 10	2 - 10
pH range during CIP				1.5 - 12.5	1.5 - 12.5	1.5 - 12.5
Disinfection with chlorine ⁽²⁾			ppm	200	200	200

⁽¹⁾ for water at 25 °C / ⁽²⁾ at 30 - 50 °C and pH > 11 for max. 30 min/day

Note: Not all combinations are available. Please do not hesitate to contact MICRODYN-NADIR for any further information.

MICRODYN-NADIR behält sich das Recht vor, Angaben ohne vorherige Ankündigung anzupassen.
We reserve the right to change specifications without prior notification.

MICRODYN-NADIR GmbH
Industriepark Kalle-Albert
Kasteler Straße 45
D-65203 Wiesbaden

Telefon: +49 (0) 611/962-6001
Telefax: +49 (0) 611/962-9237
E-Mail: info@microdyn-nadir.de
Internet: www.microdyn-nadir.de



SPIRA-CEL[®] Data Sheet

- Sanitary Modules for Nanofiltration -

DS-NP-6338 Series

Changes:

The here printed values may be subject to changes. Presently valid are the values on the data sheet shown on web site www.microdyn-nadir.com.

Tolerances:

The tolerances indicated on our data sheets are composed to the best of our knowledge.

Warranty:

Stated warranties are valid if values on this data sheet are followed during use of the module(s) only. Also rules for installation, cleaning, water and preservation have to be adhered to and log registered made available for MICRODYN-NADIR on request. MICRODYN-NADIR approved cleaning detergent, anti-foam, polymers, other chemicals and filter-aids lubricants can be applied only.

First Cleaning:

MICRODYN-NADIR modules may be put into production after having gone through the first cleaning prescribed by MICRODYN-NADIR on product packing notes or given differently by MICRODYN-NADIR.

Conformity:

All materials of the above mentioned SPIRA-CEL[®] spiral wound modules are suitable under applicable FDA regulations; certificates are on file and will be furnished upon request. Please inquire for availability of further certificates.

MICRODYN-NADIR behält sich das Recht vor,
Angaben ohne vorherige Ankündigung
anzupassen.
We reserve the right to change specifications
without prior notification.

MICRODYN-NADIR GmbH
Industriepark Kalle-Albert
Kasteler Straße 45
D-65203 Wiesbaden

Telefon: +49 (0) 611/962-6001
Telefax: +49 (0) 611/962-9237
E-Mail: info@microdyn-nadir.de
Internet: www.microdyn-nadir.de

