

ULTRADYN™ FN20-VP-FUC1582

Ultrafiltration Modules


High mechanical strength, backwashable membrane in a wide range of membrane types make ULTRADYN™ hollow fiber modules suitable for all applications requiring a high level of purification and high packing density. ULTRADYN modules are available with polyethersulfone (PES), polyacrylonitrile (PAN) and cellulose tri-acetate (CTA) hollow fiber membrane types and in configurations that can be sterilized with hot water up to 98 °C, eliminating bacterial growth and preventing fouling.

ULTRADYN modules are available with a hollow fiber inner diameter range from 0.5 to 1.4 mm, and module size range from 0.1 m² to 17 m². ULTRADYN hollow fiber modules have proven particularly successful in applications such as pure water filtration, pharmaceuticals, electronics, and surface water treatment.

MEMBRANE CHARACTERISTICS

Membrane Chemistry	Cellulose Acetate (CTA)
Molecular Weight Cut-Off	150,000 Dalton
Hollow Fiber Inner Diameter	0.8 mm

PHYSICAL DIMENSIONS

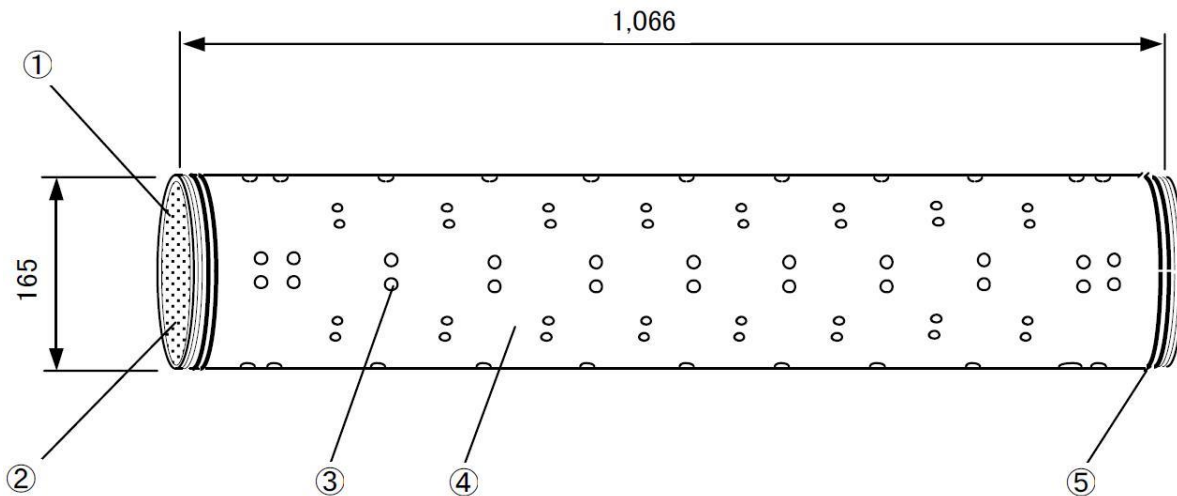

Item	Description	Material	Quantity
1	Hollow Fiber	Cellulose Acetate	-
2	Potting Resin	Polyurethane	-
3	Inner Net	Nylon	1
4	Cartridge Case	Polyvinyl chloride	1
5	O-Ring type WG-36	Ethylene Propylene Rubber (EPM)	4

OPERATING PARAMETERS & MODULE SPECIFICATIONS

Membrane Area	16.0 m ² (172 ft ²)
Standard Water Flux ^a	9.8 m ³ /h (43 gpm)
Shipping Water Flux ^a	7.5 m ³ /h (33 gpm)
Maximum Transmembrane Pressure	2 bar (29 psi)
Maximum Temperature	40°C (104°F)
Applicable pH range	4 ~ 8
Standard Inlet Feed Flow ^c	3.5 m ³ /h (15.4 gpm)
Operating Weight	23 kg (50.7 lb)
Shipping Weight	16 kg (35 lb)
Standard Preservative	2% Formalin

a Initial water flux by dead end filtration with pure water under TMP 0.1 MPa at 25°C.

b Standard condition is adjusted to 1 m/sec feed velocity. The optimum velocity is different for each application.

c This value is applicable at 25°C.

d Maximum pressures depend on operating temperature. See instruction manual for further information.

* DAICEN Membrane Systems Ltd. is the manufacturer of the ULTRADYN modules and markets and distributes them under the registered trademark MOLSEP®.

CUSTOMIZABLE SPECIALTY ELEMENTS

MICRODYN-NADIR offers a full range of membranes and element designs for challenging water and process applications. Technologies include low-fouling RO, submerged UF, continuous high temperature, ultra-high pressure, unique sanitary designs and more. Contact MICRODYN-NADIR to customize a product that satisfies your specific requirements.

Contact

Europe

Germany: +49 611 962 6001
 Italy: +39 0721 1796201
 info@microdyn-nadir.com

America

USA: +1 805 964 8003
 Brazil: +55 11 3378 7500
 info@microdyn-nadir.com

Asia

China: +86 592 677 5500
 Singapore: +65 6457 7533
 infochina@microdyn-nadir.cn